INSTALLATION GUIDE

How to install the PLISSA mini pleated insect screen

PLISSA mini is a pleated (accordion) screen with a bottom track, in three versions: side-opening, side-opening 2-leaf and reversible. The bayonet system joins the profiles into a rigid frame; then level, screw and fine-tune.

Safety

The insect screen protects against insects and small animals. It is not designed to stop people or objects from falling, nor to resist break-ins: never lean on it and, on a high window, work with a second person.

PLISSA mini

Note: this screen has a bottom track. Point it out to users to avoid trips.


Before you start

Tools

- Drill with bits suited to the wall or frame
- Spirit level (or laser)
- Tape measure and pencil
- Screwdriver

People

2 people recommended (bottom track and long leaves)

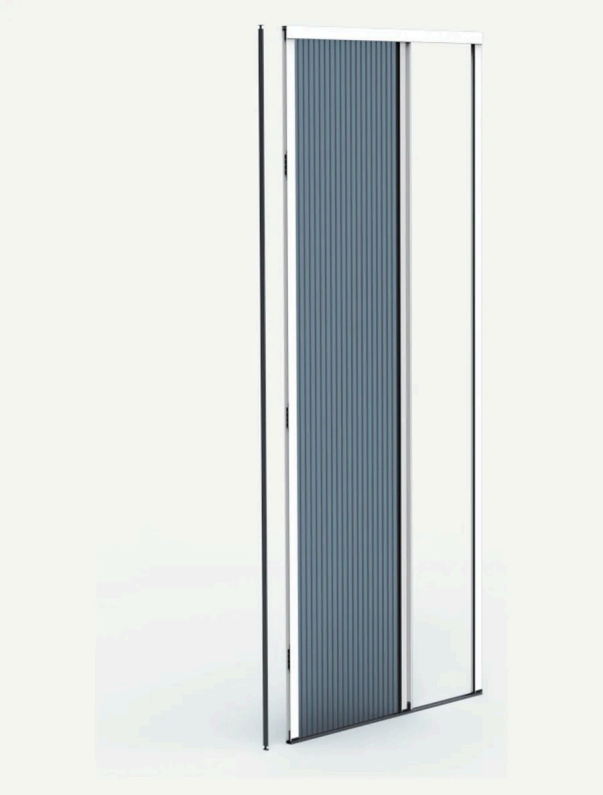


STEP BY STEP

First: the top and bottom tracks (all versions)


1. Fix the tracks

Mark the position, level the top track and fix it respecting the 2.5 mm gap shown. Then lay the bottom track on the sill; with two leaves it can be cut into two equal pieces centred in the opening.

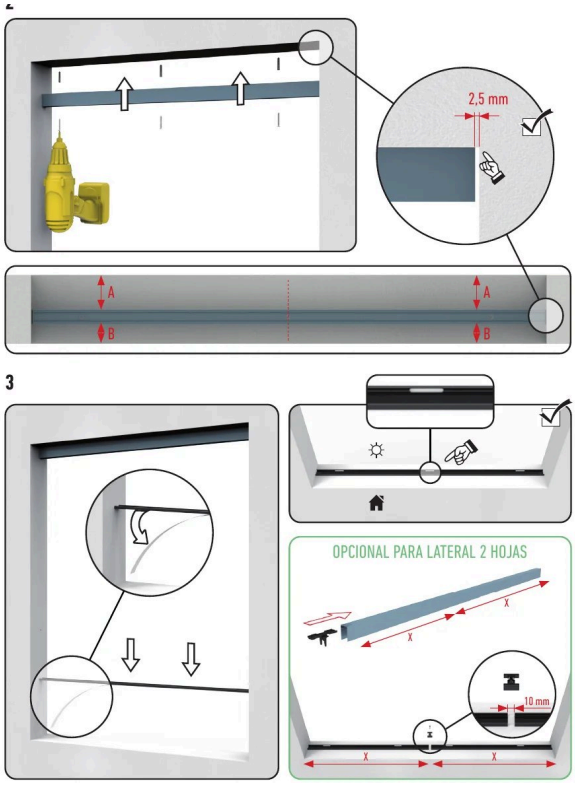

2. Prepare the profiles and fix the track

Follow figures 4 to 6 of the drawing: slide the closing profile into its track, seat the vertical profile in the bottom track (swinging it into the opening) and fix everything with the drill, always level.

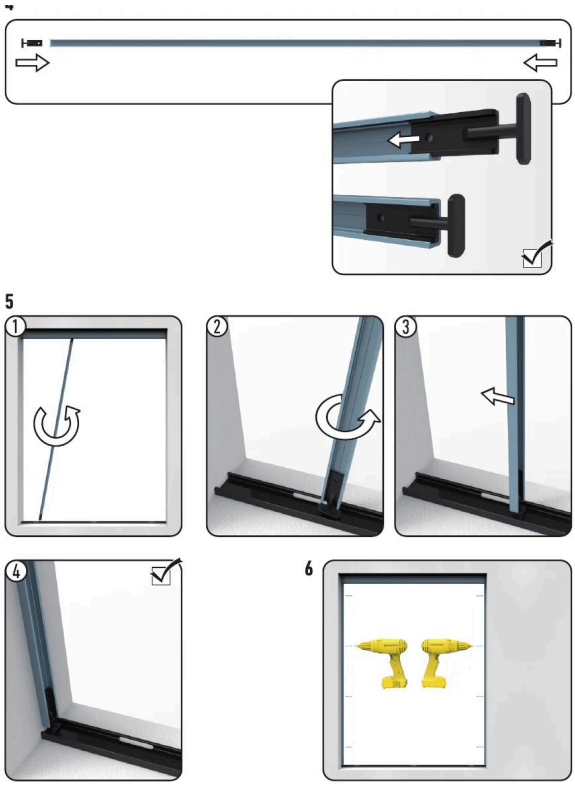

STEP BY STEP

Side-opening version (1 leaf)

Fit the side profile

Swing the vertical profile into the opening, slide it between the tracks and snap it in: you hear a CLICK at both bayonet points. Repeat with the closing profile up to the final CLICK.



Level, screw and fine-tune

Check level, screw the profile and confirm the pleats are taut and aligned (cross = wrong, tick = right). Adjust with the screwdriver.




STEP BY STEP

Side-opening 2-leaf version


Fit the two side profiles

Swing and slide each side profile to its side of the opening and snap the four corners (CLICK at points A and B).

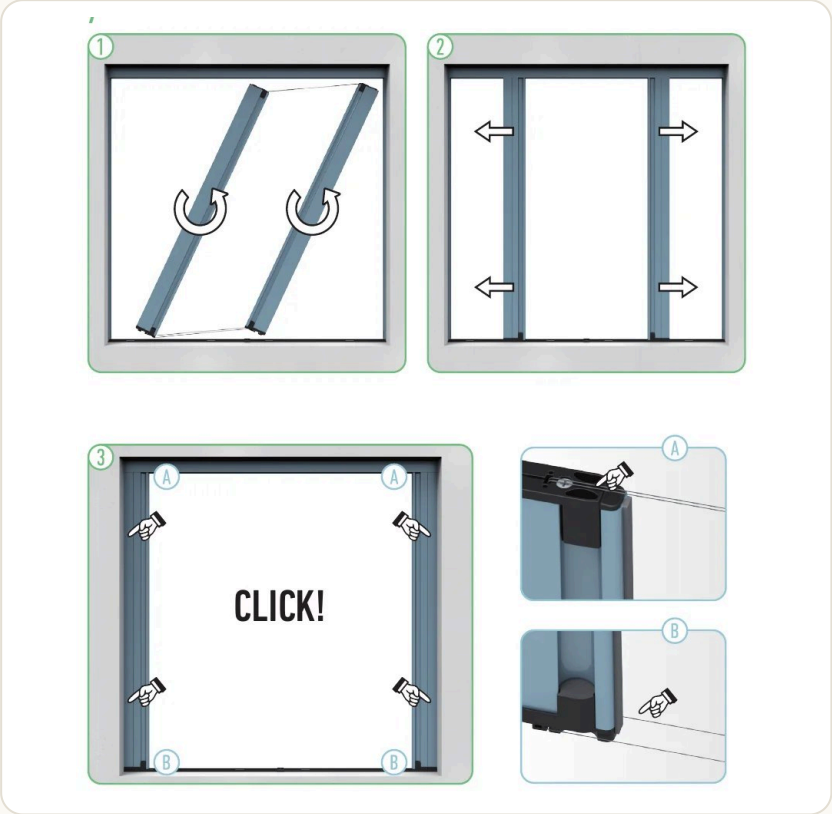

Level, screw and centre the leaves

Level, screw and check the two leaves meet in the middle with equal widths (equal x). Adjust the pleats as for the side version.

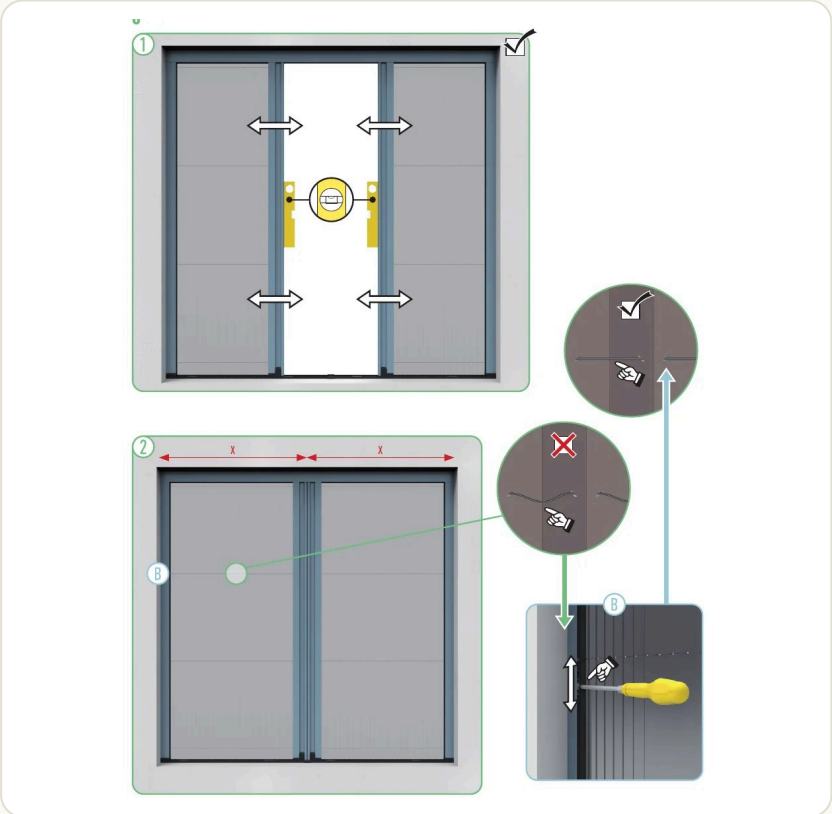


STEP BY STEP

Reversible version


Fit the double centre profile

Swing the centre profile into the opening, spread the leaves and snap the four corners (CLICK).

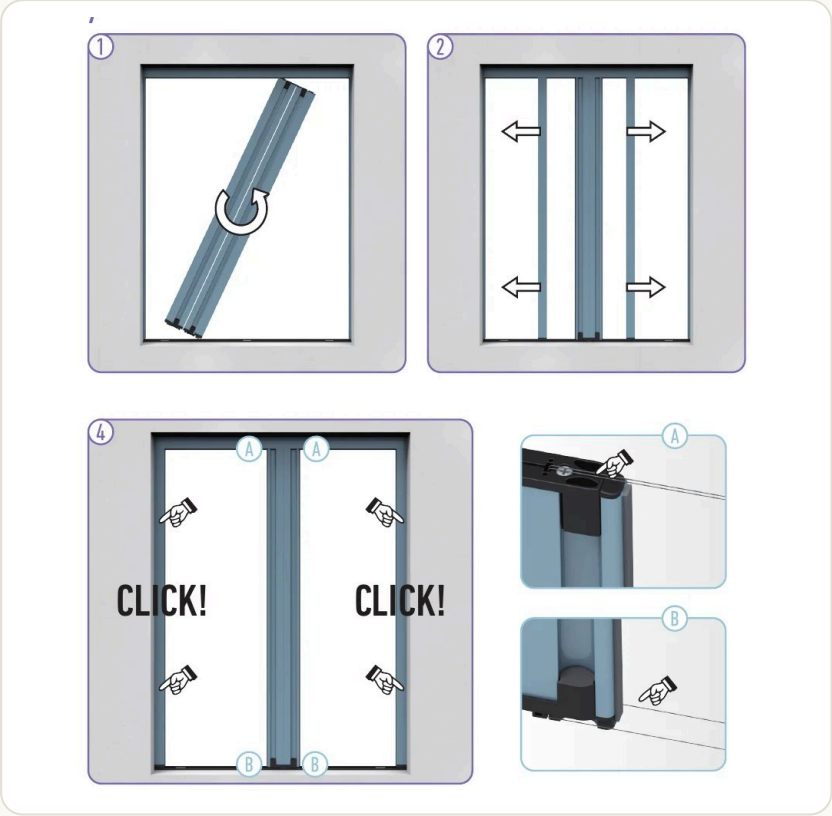

Level, screw and fine-tune

Level, screw the centre profile and check the pleats fold symmetrically; adjust until the leaves line up.

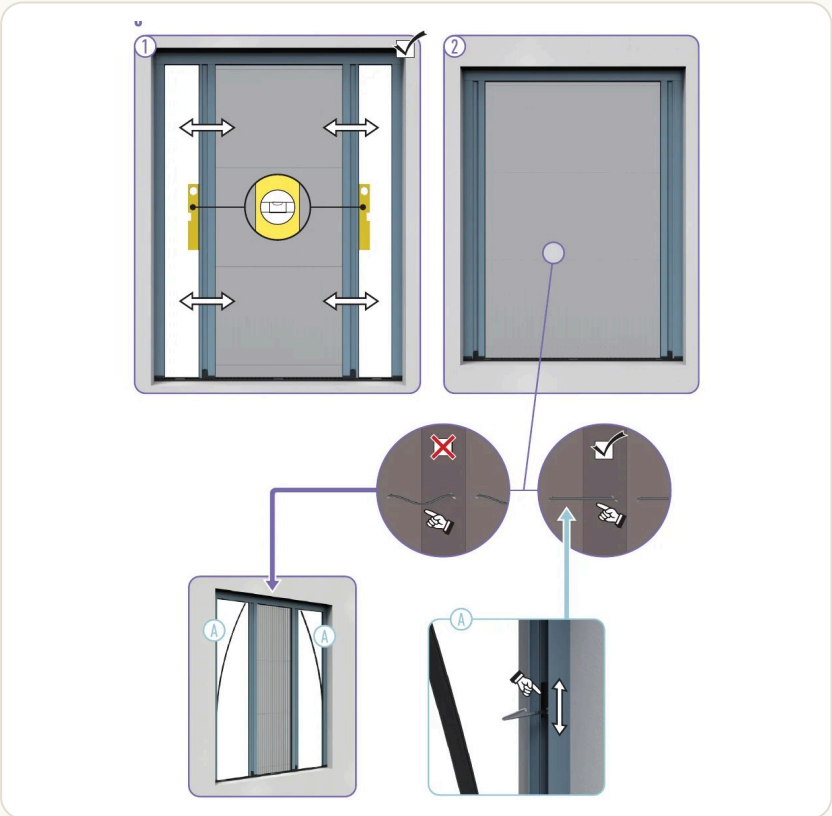

FINAL CHECKS

Final checks

- The pleats open and close smoothly and stop at any position.
- The closure sits flush against the profile, with no gaps.
- The bottom track is firm and visible (no trip risk).

Need a hand?

If something does not fit, do not force it: photograph the problem and send it to us.

Online version of this guide
www.estoresportugal.com/en/install-pleated-insect-screen.html

Contact
contact@estoresportugal.com
+351 256 094 874 · +351 923 325 489
+33 1 83 64 73 44
WhatsApp +351 923 325 489

Estores Portugal · OKJAFE, Lda
R. do Falcão 245, 3860-139 Avanca
Portugal
Monday to Friday · 08:15–12:30 · 13:30–17:15

Illustrations based on the profile manufacturer's assembly instructions.
Informational document — specifications may change without notice.